

Basics to Using the **D7500** for VIDEO

- Reset the Camera **each time** you sign it out **Format** the SD card

Menu Setup for video MENU>MOVIE SHOOTING MENU

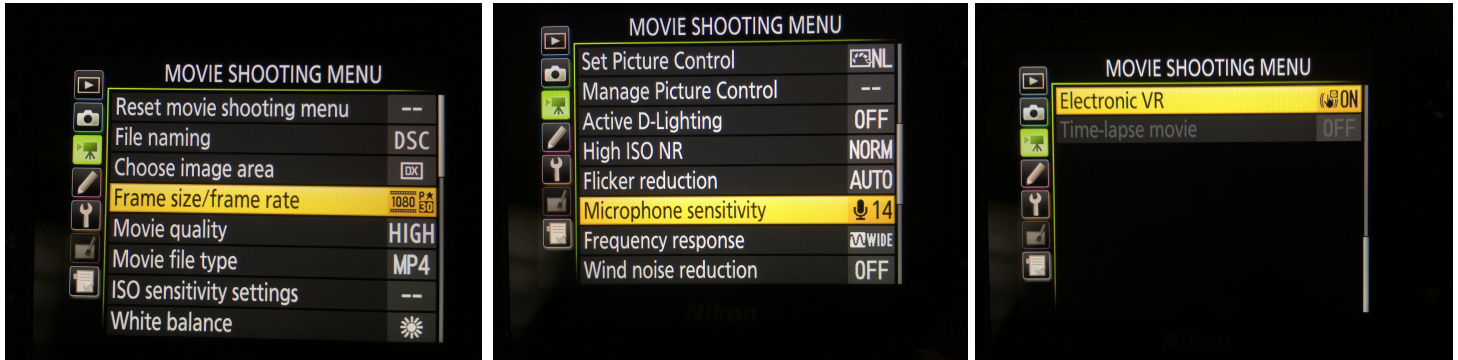


IMAGE QUALITY:

- menu>Movie Shooting Menu>Frame size/frame rate>
- 1920x1080 30fps or 24fps (typically we'll use 30fps) Movie quality>**high** Movie file type **MP4**

CONTROLS:

- Shoot on MANUAL exposure so the exposure doesn't fluctuate within a shot. Turn on Highlight
- Display (Zebra stripes) using **i** button to warn about overexposure
- DON'T use auto white balance - your colors will fluctuate
- Use Manual FOCUS - the camera cannot autofocus well in live view
- SHUTTER Speed - **for video shoot at ~ 1/60 of a second**. Don't use faster shutter speeds.
- Use a TRIPOD

AUDIO:

The D7500 allows you to adjust levels and LISTEN with headphones while recording

- Set the levels manually or, in certain situations set the levels to 'A'. In Live View, press the **'i'**

button, scroll to the mic and use the 'wheel' to adjust your audio levels. Press 'OK' to set your new audio.

•WEAR HEADPHONES. NO EXCUSE NOT TO.

To Shoot Video

Turn KNOB to the video icon and press LV (live view)

Press the **'red'** button on top of the camera to start and stop video recording